



INSTALLATION INSTRUCTIONS

Accessory

FULL NOSE MASK
P/N 08P35-S84-100G

Application

1999 ACCORD
4-DOOR

Publications No.


AI1 20026

Issue Date


SEP 1998

PARTS LIST

Mask (hood section)

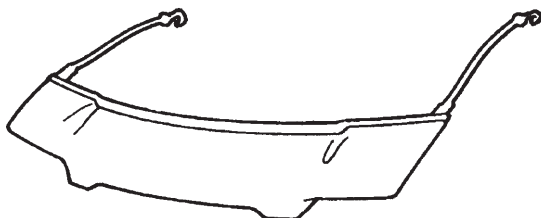

Mask (bumper section)

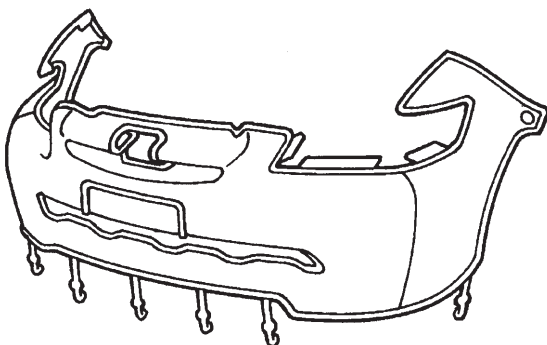

2 Snap-screws




2 Washers



2 Fenderwell nuts



Storage bag

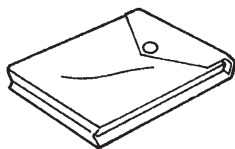

TOOLS AND SUPPLIES REQUIRED

Stubby #2 Phillips screwdriver

Scissors

Shop towel

Contact cleaner

INSTALLATION


NOTE:

- Make sure the vehicle and the mask are clean and completely dry before installation. If moisture under the mask is allowed to dry, it may cloud the paint. If the mask gets wet, remove it and allow it to air-dry completely.
- Make sure any repainted surfaces are cured.
- Make sure the hood and nose of the vehicle have been waxed with a high-quality paste wax.
- Make sure you install the mask securely. (If the mask starts to flap or comes loose while driving, safely pull off the highway, stop the vehicle, and secure or remove the mask.)


Displaying the License Plate

If your state law requires the display of both license plates, cut out the piece of the bumper section that covers the front license plate.


- Face the inside of the mask toward you.
- Carefully cut out the license plate section with scissors at the two seams, and remove the overcast stitching.

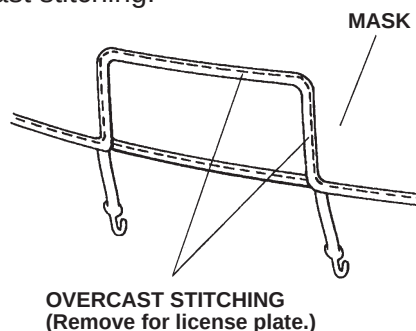

1. Open the hood, then fit the corners of the mask's hood section around the hood. Adjust the mask so that it fits smoothly around the edges.

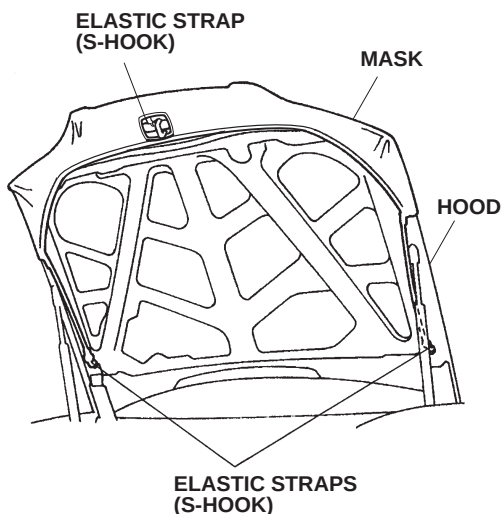


2. Secure the mask by hooking the three elastic straps to the holes in the hood.
3. Turn the steering wheel all the way to the right.
4. Unscrew the plastic screw from the expansion clip that holds the left inner fender; remove and retain the clip, then clean the area around the hole.

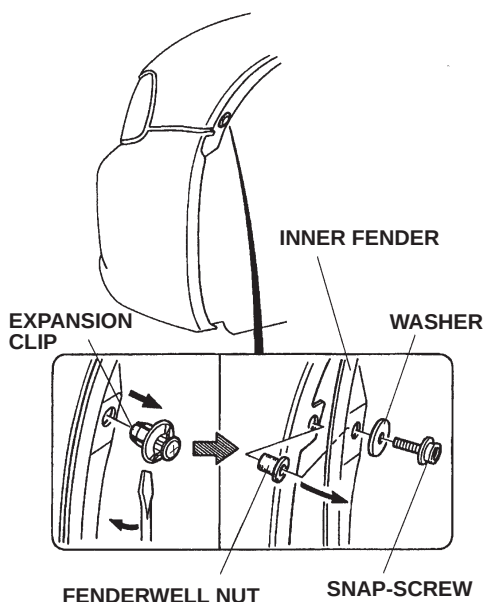


5. Pull away the inner fender, and press a fenderwell nut into the hole in the fender flange.
6. With its washer in place, securely tighten a snap-screw into the fenderwell nut.


7. Turn the steering wheel all the way to the left, and repeat steps 4 through 6 for the right side.
8. Locate the upper tab next to the pocket at the mask's bumper section, and slide it between the fender and the rubber weatherstrip (on top of the headlight assembly).

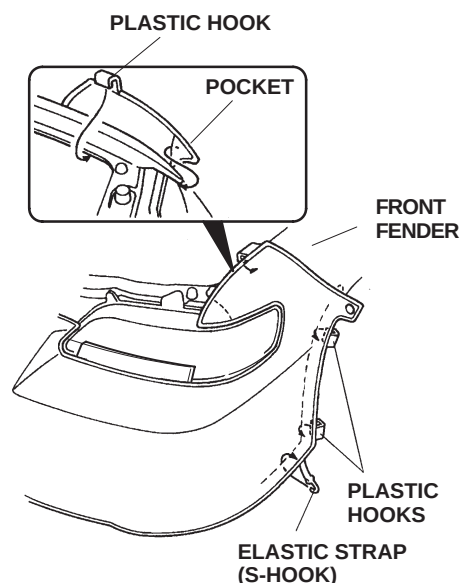


9. Slip the pocket of the mask's fender section onto the front corner of each fender; then attach the plastic hook to the top inside edge of each fender.
10. Attach the two plastic hooks and the elastic strap on the mask's fender section onto the bottom corner of the fender. Do this for both sides.
11. On each side, pull the mask back toward the wheelwell, smooth out any wrinkles, and snap the mask to the snap-screw.

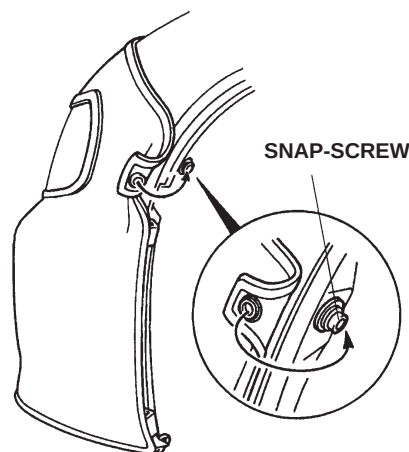

12. Insert the tabs near the headlights between the headlight assemblies and the bumper.

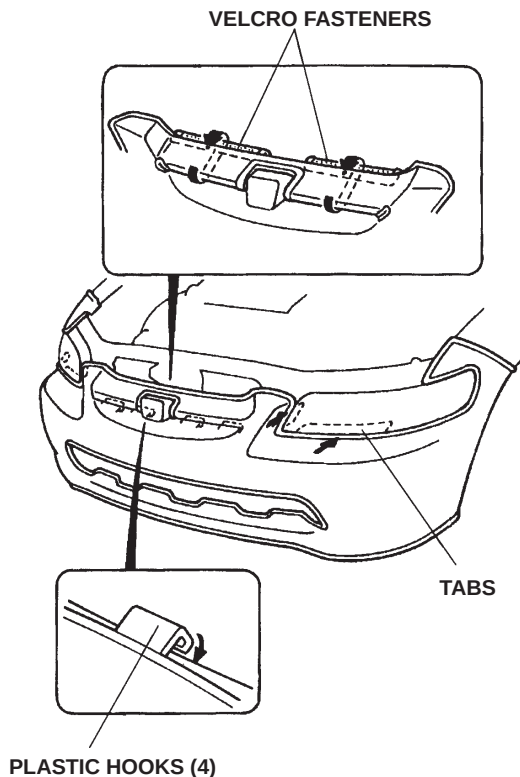

13. Secure the mask's center section to the front bumper with the Velcro fasteners and the plastic hooks along the bottom of the front grille.

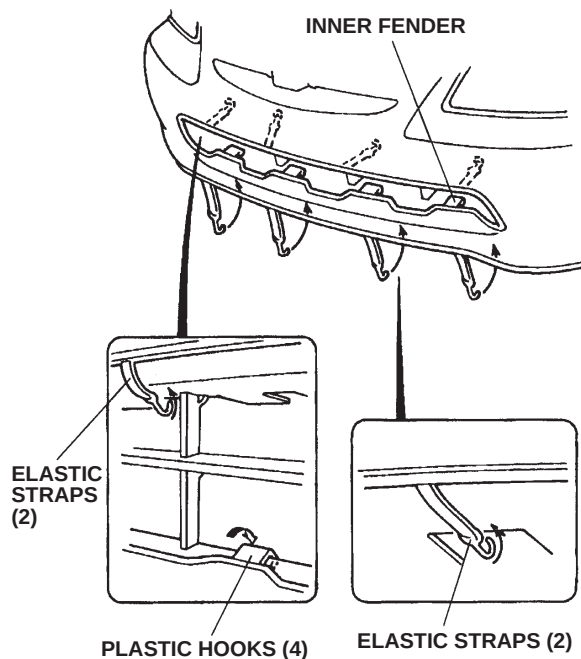

14. Attach the plastic hooks along the bottom of the front bumper grille opening.

15. Attach the elastic straps to the top and lower edges of the front bumper grille opening.

16. Put these instructions along with the plastic screws and expansion clips (removed in step 4) into the storage bag, and place it in the trunk for future use.

CLEANING THE NOSE MASK

Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the vinyl and the flannel backing. Rinse the mask completely with clean water, and hang it to dry out of direct sunlight. Make sure the mask is completely dry before you reinstall it.